



Product	L551.N172		
Code	(4-)	P	(G4)

premttexture


decorative ceiling & wall finish

working time



A decorative finish that can be applied to ceilings or walls to create or remove a variety of textured patterns.

- Warm or cold water mix for convenience
- Easy to work with, saving time
- Extended working time, less wastage
- Covers rough surfaces, no need to pre-smooth
- Excellent definition to create any pattern

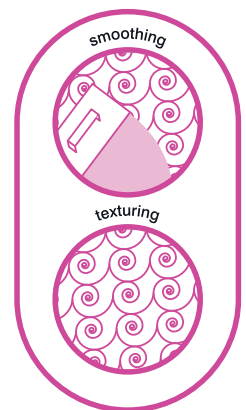

available in

25kg
bag



premtexture

decorative ceiling & wall finish

Surface Preparation

It is imperative that all surfaces are clean, sound and dry prior to application. All decorative wall papers should be removed to uncover the original surface. Painted surfaces should have all loose and flaky materials, including distempered finishes removed. Once this is thoroughly completed, seal the surface using Ultra Floor Prime IT Multi-surface Primer, diluted 5 parts water to 1 part primer. Apply one coat and allow to dry before proceeding.

Mixing

Always use clean water, bucket and tools. The suggested mix ratio is 1 part water to 2 parts powder. Alternatively 12 litres of water per 25kg bag. Add Wondertex prem texture to warm or cold water and mix thoroughly until a smooth lump free consistency is achieved. Allow mixed material to stand for 5 minutes then mix again before use. If required add more powder (or water) to achieve the required consistency.

Application

Texturing and Smoothing

Apply Wondertex prem texture liberally in one metre strips, with a brush or roller, across the width of ceilings or from top to bottom of walls. Texture or smooth an area of approximately 1m² at any one time whilst the product is still wet. Once applied to the ceiling or wall, Wondertex prem texture will have approximately 15 minutes to apply the desired texture or finish.

Jointing

To apply Wondertex prem texture to a freshly boarded ceiling or wall, ideally joints should be taped first using Wondertex prem filler and Wondertex white perforated joint tape. However if necessary, Wondertex prem texture can be substituted for Wondertex prem filler to complete the taping of joints. In such instances apply Wondertex prem texture to the joints and to 50mm either side. Press tape firmly over joint with caulking tool. At this stage a light pre-caulk of the tape surface is recommended. To produce a surface of uniform porosity the recommended method is to carry out full joint treatment, allow to dry for approximately 2 hours and then texture as stated above as a one-day operation.

Finishing

Leave Wondertex prem texture to dry completely for 5 days, apply a mist coat and full coat of good quality emulsion paint for the perfect finish.

Coverage

As a general guide: Light textures 30-50m² per 25kg
Heavy textures 20-30m² per 25kg

Storage

The product must be stored in temperatures above 5°C and not exceeding 30°C, in a dry place.

Instarmac Group plc
Danny Morson Way, Birch Coppice Business Park,
Dordon Tamworth, Staffordshire B78 1SE
Tel: +44 (0)1827 872244 Fax: +44 (0)1827 874466
Enquiries: email@instarmac.co.uk Orders: orders@instarmac.co.uk
Visit instarmac.co.uk

Vers3.06.2016 Information correct at time of print.

Shelf Life

12 months in original unopened bags if stored in the conditions listed above.

Notes

Wondertex prem texture has a working time of 3 hours. Only mix sufficient material that can be used in this time.

Product dries to an almond white colour. Should weather or site conditions cause uneven drying and resulting colour irregularities this can be treated simply by painting over with an almond white emulsion diluted with 25% water.

To produce a surface of uniform porosity the recommended method is to carry out taping, pre-caulking and texturing as a one-day operation. However where texturing may be delayed for an unusually long period, sealing should be carried out as soon as possible, particularly if the weather is hot and dry. In such instances seal the area by applying one coat of Ultra Floor Prime IT Multi-surface Primer, diluted 5 parts water to 1 part primer.

Do not use in temperatures less than 3°C. Temperatures must also remain above 3°C during drying time.

Clean any accidental splashes from floors etc. with warm water before drying.

Health & Safety

Please ensure that appropriate PPE is used when preparing, mixing and applying products. Always wash hands before consuming food and make sure that materials are kept safely out of reach of children and animals. Please dispose of packaging and waste responsibly and in accordance with local authority requirements. A full Material Safety Data Sheet relating to this product is available from www.instarmac.co.uk.

Quality Assurance

All products are manufactured in a plant whose quality management system is certified/registered as being in conformity with BS EN ISO 9001, ISO 14001 and OHSAS 18001. Our products are guaranteed against defective materials and manufacture and will be replaced or money refunded if the goods do not comply with our promotional literature. We cannot however accept responsibility arising from the application or use of our products because we have no direct or continuous control over where and how our projects are used. All products are sold subject to our conditions of sales, copies of which may be obtained upon request.

	prem fill & finish	prem texture	prem adhesive	prem finish	prem filler
sizes	7.5kg & 15kg	25kg	15kg	25kg	12.5kg
bonding	•		•		
repairing	•			•	•
jointing	•			•	•
filling	•				•
smoothing	•	•		•	
snagging	•			•	
texturing		•			
working time	60mins	3hrs	60-90mins	180mins	60-90mins
apply 2nd coat	2-4hours	n/a	n/a	3-5hours	n/a